

Work Order ID 129682

February-23-15 10:15:54 AM

129682

Page 1

Item ID: D350-607-511

Accept

N900040100

Setup Start ***NS1***

Revision ID:

Item Name: Quick Release Basket Mounting Spacepod™ & Squirrel Cheek Fits LH or RH

Stop ***NS2***

Start Date: 2/13/15 Start Qty: 1.00 ***1***

Cust Item ID:

Required Date: 2/23/15 Req'd Qty: 1.00 ***1***

Customer:

Reference:

Approvals: Process Plan: MLJ Date: 1502-24 Tooling: _____ Date: _____
QC: _____ Date: _____ SPC (Y/N): _____ Date: _____

Run Start ***NR1***
Stop ***NR2***

Sequence ID/ Work Center ID	Operation Description	Set Up/ Run Hours	Tool ID	Tool #	Plan Code	Accept Qty	Reject Qty	Reject Number	Insp. Stamp
--------------------------------	--------------------------	----------------------	---------	--------	--------------	---------------	---------------	------------------	----------------

Draw Nbr	Revision Nbr
D350-607-4	C
DSI9699	A

135

100 Document Control 0.00

100

DC Memo 0.00

Doc.Control -USB or Paperwork Photocopy bluefile & type labels per PPP D350-607-511 CHG006

MAR 2 5 2015

DAS
26
9-89

140 Pick Kit 0.00

140

Packaging Memo 0.00

Packaging

IX

DAS
26
9-89

MAR 2 4 2015

DAS
46
9-89

MAR 2 5 2015

DQA: _____ Date: _____



WORK ORDER NON-CONFORMANCE / UPDATE

QA Closed: _____ Date: _____

Work Order update only ☐

Work Order: _____ Part No. _____ NCR No. _____	DISPOSITION Rework ☐ Scrap ☐ Use-as-is ☐ Suspected Unapproved ☐	AGAINST DEPARTMENT/PROCESS <table style="width: 100%;"> <tr> <td>Skid-tube ☐</td> <td>Crosstube ☐</td> <td>Water Jet ☐</td> <td>Engineering ☐</td> </tr> <tr> <td>Machining ☐</td> <td>Small Fab ☐</td> <td>Prod. Eng. Coord. ☐</td> <td>Quality ☐</td> </tr> <tr> <td>Thermoforming ☐</td> <td>Finishing ☐</td> <td>Rec/Store/Packaging ☐</td> <td>Other ☐</td> </tr> <tr> <td>Large Fab ☐</td> <td>Composite ☐</td> <td>Supplier ☐</td> <td></td> </tr> </table>	Skid-tube ☐	Crosstube ☐	Water Jet ☐	Engineering ☐	Machining ☐	Small Fab ☐	Prod. Eng. Coord. ☐	Quality ☐	Thermoforming ☐	Finishing ☐	Rec/Store/Packaging ☐	Other ☐	Large Fab ☐	Composite ☐	Supplier ☐	
Skid-tube ☐	Crosstube ☐	Water Jet ☐	Engineering ☐															
Machining ☐	Small Fab ☐	Prod. Eng. Coord. ☐	Quality ☐															
Thermoforming ☐	Finishing ☐	Rec/Store/Packaging ☐	Other ☐															
Large Fab ☐	Composite ☐	Supplier ☐																

Root Cause	Date	Step	Qty	Description of work order update or non-conformance	Initial Chief Eng	Action Description	Sign & Date	Verification	QC Inspector
Design									
Doc/Data									
Equip/Tooling									
Handling/Pre									
Material									
Operator									
Offset/Setup									
Process									
Supplier									
Training									
Transport									
Unapproved									

FAULT CATEGORY

Landing Gear ☐ Bending ☐ Centre Not Concentric ☐ Cracks ☐ Crimp/Kink/Ripple/Wave ☐ Cuffs ☐ Crushing ☐ Heat Treat ☐ Inspection Strip in Tube ☐ Marks/Chatter ☐ Turning Sequence ☐ Wave/Twist in Tube	General ☐ Bend ☐ BOM/Route ☐ Broken/Damage/Defect ☐ Burrs ☐ Contamination ☐ Countersink ☐ Cut Too Short ☐ Drawing ☐ Drill Holes ☐ Finish ☐ Fit/Function	☐ Folio/Program ☐ Grain ☐ Hardware ☐ Inspection Incomplete/Unqualified ☐ Instructions Incomplete/Unclear ☐ Misaligned/off center ☐ Mislabeled ☐ Misread ☐ Off-set ☐ Out of Calibration ☐ Out of Sequence	☐ Outside Dimensions ☐ Over/Under tolerance ☐ Part Incorrect ☐ Part Lost/Missing ☐ Part Moved ☐ Positioned Wrong ☐ Power Loss/Surge ☐ Pressure/Forced ☐ Set-up ☐ Temperature/Cure ☐ Weld ☐ Wrong Stock Pulled ☐ Other
--	--	---	--

February-23-15 10:15:54 AM

1 29682

Page 2

Accept

N900040100

Setup Start *NS1*

Stop *NS2*

Item Name: Quick Release Basket Mounting Spacepod™ & Squirrel Cheek Fits LH or RH

Start Date: 2/13/15 **Start Qty:** 1.00 ***1***

Cust Item ID:

Required Date: 2/23/15 **Req'd Qty:** 1.00 ***1***

Customer:

Reference:

Approvals: **Process Plan:** _____ **Date:** _____ **Tooling:** _____ **Date:** _____
QC: _____ **Date:** _____ **SPC (Y/N):** _____ **Date:** _____

Run	Start	*NR1*
	Stop	*NR2*

Sequence ID/ Work Center ID	Operation Description	Set Up/ Run Hours	Tool ID	Tool #	Plan Code	Accept Qty	Reject Qty	Reject Number	Insp. Stamp
150	GRINDING								

150 QC4- 100% Inspect kits for completeness

0.00

150

QC Memo

0.00

Quality Control

MAR 25 2015

DAG
66
8-89

160	0.00
-----	------

160

Packaging	Memo	0.00
-----------	------	------

Packaging Identify and pack for shipping as per PPP D350-607-511
Location: **DE 6015**

MAR 26 2015

DA
66
3-23

170	QC21- Final Inspection - Work Order Release	0.00
-----	---	------

170

QC	Memo	0.00
----	------	------

Quality Control

15/3/27 
me
15-3-26

DQA: _____ Date: _____



WORK ORDER NON-CONFORMANCE / UPDATE

QA Closed: _____ Date: _____

Work Order update only ☐

Work Order: _____ Part No. _____ NCR No. _____	DISPOSITION Rework ☐ Scrap ☐ Use-as-is ☐ Suspected Unapproved ☐	AGAINST DEPARTMENT/PROCESS Skid-tube ☐ Machining ☐ Thermoforming ☐ Large Fab ☐ Crosstube ☐ Small Fab ☐ Finishing ☐ Composite ☐ Water Jet ☐ Prod. Eng. Coord. ☐ Rec/Store/Packaging ☐ Supplier ☐ Engineering ☐ Quality ☐ Other ☐
--	--	---

Root Cause	Date	Step	Qty	Description of work order update or non-conformance	Initial Chief Eng	Action Description	Sign & Date	Verification	QC Inspector
Design									
Doc/Data									
Equip/Tooling									
Handling/Pre									
Material									
Operator									
Offset/Setup									
Process									
Supplier									
Training									
Transport									
Unapproved									

FAULT CATEGORY

Landing Gear ☐ Bending ☐ Centre Not Concentric ☐ Cracks ☐ Crimp/Kink/Ripple/Wave ☐ Cuffs ☐ Crushing ☐ Heat Treat ☐ Inspection Strip in Tube ☐ Marks/Chatter ☐ Turning Sequence ☐ Wave/Twist in Tube	General ☐ Bend ☐ BOM/Route ☐ Broken/Damage/Defect ☐ Burrs ☐ Contamination ☐ Countersink ☐ Cut Too Short ☐ Drawing ☐ Drill Holes ☐ Finish ☐ Fit/Function	☐ Folio/Program ☐ Grain ☐ Hardware ☐ Inspection Incomplete/Unqualified ☐ Instructions Incomplete/Unclear ☐ Misaligned/off center ☐ Mislabeled ☐ Misread ☐ Off-set ☐ Out of Calibration ☐ Out of Sequence	☐ Outside Dimensions ☐ Over/Under tolerance ☐ Part Incorrect ☐ Part Lost/Missing ☐ Part Moved ☐ Positioned Wrong ☐ Power Loss/Surge ☐ Pressure/Forced ☐ Set-up ☐ Temperature/Cure ☐ Weld ☐ Wrong Stock Pulled ☐ Other
--	--	---	--

Picklist Print

February-23-15 10:15:53 AM

Page 1

Work Order ID: 129682

129682

Parent Item: D350-607-511

D350-607-511

Parent Item Name: Quick Release Basket Mounting Spacepod™ & Squirrel Cheek Fits LH or RH

Start Date: 2/13/15

Required Date: 2/23/15

Start Qty: 1.00

Required Qty: 1.00

Comments: IPP REV:A NEW ISSUE 10-06-28 JLM VERIFIED BY: LL IPP
REV:B 13.12.30 PER RE:C ECN13-672 DD VERF:RQ IPP REV:C
14.06.09 AS PER ECN14-572 DD VERF:JLM

Component Item ID/ Item Name	Replacement Item ID	Mfg/ Purch	Bin Item	Primary Location	Last Location	Route Seq ID	Unit of Measure	Qty on Hand	Qty per Kit	Total Qty	Qty Issued	Date Issued	Status
D3910-7 *D3910-7* Crosstube Lug		Manufactured	No				Each	14.0000		1		DAS 46 9-89	DAS 28 9-89
				<u>Location</u>				<u>Loc Qty</u>		<u>Loc Code</u>			
				ST525				14					
					120673			14					
D3501-1 *D3501-1* Bushing		Manufactured	No			140	Each	460.0000	8				
				<u>Location</u>				<u>Loc Qty</u>		<u>Loc Code</u>			
				ST038A				433				DAS 46 9-89	DAS 28 9-89
					121654			121					
					125925			162					
					129419			150					
				ST046				27					
					120509			27					
D3910-3 *D3910-3* X-Tube Lug		Manufactured	No			140	Each	111.0000	2	2		DAS 46 9-89	DAS 28 9-89
				<u>Location</u>				<u>Loc Qty</u>		<u>Loc Code</u>			
				ST524				36					
					110324			36					
				ST525A				75					
					117781			75					

MAR 25 2015

DQA: _____ Date: _____



WORK ORDER NON-CONFORMANCE / UPDATE

QA Closed: _____ Date: _____

Work Order update only ☐

Work Order: _____ Part No. _____ NCR No. _____	DISPOSITION Rework ☐ Scrap ☐ Use-as-is ☐ Suspected Unapproved ☐	AGAINST DEPARTMENT/PROCESS <table style="width: 100%;"> <tr> <td>Skid-tube ☐</td> <td>Crosstube ☐</td> <td>Water Jet ☐</td> <td>Engineering ☐</td> </tr> <tr> <td>Machining ☐</td> <td>Small Fab ☐</td> <td>Prod. Eng. Coord. ☐</td> <td>Quality ☐</td> </tr> <tr> <td>Thermoforming ☐</td> <td>Finishing ☐</td> <td>Rec/Store/Packaging ☐</td> <td>Other ☐</td> </tr> <tr> <td>Large Fab ☐</td> <td>Composite ☐</td> <td>Supplier ☐</td> <td></td> </tr> </table>	Skid-tube ☐	Crosstube ☐	Water Jet ☐	Engineering ☐	Machining ☐	Small Fab ☐	Prod. Eng. Coord. ☐	Quality ☐	Thermoforming ☐	Finishing ☐	Rec/Store/Packaging ☐	Other ☐	Large Fab ☐	Composite ☐	Supplier ☐	
Skid-tube ☐	Crosstube ☐	Water Jet ☐	Engineering ☐															
Machining ☐	Small Fab ☐	Prod. Eng. Coord. ☐	Quality ☐															
Thermoforming ☐	Finishing ☐	Rec/Store/Packaging ☐	Other ☐															
Large Fab ☐	Composite ☐	Supplier ☐																

Root Cause	Date	Step	Qty	Description of work order update or non-conformance	Initial Chief Eng	Action Description	Sign & Date	Verification	QC Inspector
Design ☐									
Doc/Data ☐									
Equip/Tooling ☐									
Handling/Pre ☐									
Material ☐									
Operator ☐									
Offset/Setup ☐									
Process ☐									
Supplier ☐									
Training ☐									
Transport ☐									
Unapproved ☐									

FAULT CATEGORY

Landing Gear ☐ Bending ☐ Centre Not Concentric ☐ Cracks ☐ Crimp/Kink/Ripple/Wave ☐ Cuffs ☐ Crushing ☐ Heat Treat ☐ Inspection Strip in Tube ☐ Marks/Chatter ☐ Turning Sequence ☐ Wave/Twist in Tube	General ☐ Bend ☐ BOM/Route ☐ Broken/Damage/Defect ☐ Burrs ☐ Contamination ☐ Countersink ☐ Cut Too Short ☐ Drawing ☐ Drill Holes ☐ Finish ☐ Fit/Function	☐ Folio/Program ☐ Grain ☐ Hardware ☐ Inspection Incomplete/Unqualified ☐ Instructions Incomplete/Unclear ☐ Misaligned/off center ☐ Mislabeled ☐ Misread ☐ Off-set ☐ Out of Calibration ☐ Out of Sequence
		☐ Outside Dimensions ☐ Over/Under tolerance ☐ Part Incorrect ☐ Part Lost/Missing ☐ Part Moved ☐ Positioned Wrong ☐ Power Loss/Surge
		☐ Pressure/Forced ☐ Set-up ☐ Temperature/Cure ☐ Weld ☐ Wrong Stock Pulled ☐ Other

Picklist Print

February-23-15 10:15:53 AM

Page 2

Work Order ID: 129682

129682

Parent Item: D350-607-511

D350-607-511

Parent Item Name: Quick Release Basket Mounting Spacepod™ & Squirrel Cheek Fits LH or RH

Start Date: 2/13/15

Required Date: 2/23/15

Start Qty: 1.00

Required Qty: 1.00

D3910-5
D3910-5
Crosstube Lug

DAS
06
9-89

Manufactured No

140 Each

22.0000

1

DAS
46
9-89

DAS
26
9-89

**

Location

Loc Qty

Loc Code

ST525

22

117637

22

D3984

Manufactured No

140

f

44.0000

2

DAS
46
9-89

DAS
26
9-89

**

Location

Loc Qty

Loc Code

ST413

44

115196

44

DAS
06
9-89

D4148-041

Manufactured No

140

Each

2.0000

**

Location

Loc Qty

Loc Code

ST539A

2

125332

2

D4149-041

Manufactured No

140

Each

2.0000

**

Location

Loc Qty

Loc Code

ST539

2

127612

2

DAS
06
9-89

D4149-041
Aft X-Tube Lug Ass'y

DAS
26
9-89

DAS
46
9-89

DAS
26
9-89

MAR 25 2015

~~102 77 NW~~

DAS
46
9-89

DQA: _____ Date: _____



WORK ORDER NON-CONFORMANCE / UPDATE

QA Closed: _____ Date: _____

Work Order update only ☐

Work Order: _____ Part No. _____ NCR No. _____	DISPOSITION Rework ☐ Scrap ☐ Use-as-is ☐ Suspected Unapproved ☐	AGAINST DEPARTMENT/PROCESS <table style="width:100%;"> <tr> <td>Skid-tube ☐</td> <td>Crosstube ☐</td> <td>Water Jet ☐</td> <td>Engineering ☐</td> </tr> <tr> <td>Machining ☐</td> <td>Small Fab ☐</td> <td>Prod. Eng. Coord. ☐</td> <td>Quality ☐</td> </tr> <tr> <td>Thermoforming ☐</td> <td>Finishing ☐</td> <td>Rec/Store/Packaging ☐</td> <td>Other ☐</td> </tr> <tr> <td>Large Fab ☐</td> <td>Composite ☐</td> <td>Supplier ☐</td> <td></td> </tr> </table>	Skid-tube ☐	Crosstube ☐	Water Jet ☐	Engineering ☐	Machining ☐	Small Fab ☐	Prod. Eng. Coord. ☐	Quality ☐	Thermoforming ☐	Finishing ☐	Rec/Store/Packaging ☐	Other ☐	Large Fab ☐	Composite ☐	Supplier ☐	
Skid-tube ☐	Crosstube ☐	Water Jet ☐	Engineering ☐															
Machining ☐	Small Fab ☐	Prod. Eng. Coord. ☐	Quality ☐															
Thermoforming ☐	Finishing ☐	Rec/Store/Packaging ☐	Other ☐															
Large Fab ☐	Composite ☐	Supplier ☐																

Root Cause	Date	Step	Qty	Description of work order update or non-conformance	Initial Chief Eng	Action Description	Sign & Date	Verification	QC Inspector
Design									
Doc/Data									
Equip/Tooling									
Handling/Pre									
Material									
Operator									
Offset/Setup									
Process									
Supplier									
Training									
Transport									
Unapproved									

FAULT CATEGORY

Landing Gear ☐ Bending ☐ Centre Not Concentric ☐ Cracks ☐ Crimp/Kink/Ripple/Wave ☐ Cuffs ☐ Crushing ☐ Heat Treat ☐ Inspection Strip in Tube ☐ Marks/Chatter ☐ Turning Sequence ☐ Wave/Twist in Tube	General ☐ Bend ☐ BOM/Route ☐ Broken/Damage/Defect ☐ Burrs ☐ Contamination ☐ Countersink ☐ Cut Too Short ☐ Drawing ☐ Drill Holes ☐ Finish ☐ Fit/Function	☐ Folio/Program ☐ Grain ☐ Hardware ☐ Inspection Incomplete/Unqualified ☐ Instructions Incomplete/Unclear ☐ Misaligned/off center ☐ Mislabeled ☐ Misread ☐ Off-set ☐ Out of Calibration ☐ Out of Sequence	☐ Outside Dimensions ☐ Over/Under tolerance ☐ Part Incorrect ☐ Part Lost/Missing ☐ Part Moved ☐ Positioned Wrong ☐ Power Loss/Surge ☐ Pressure/Forced ☐ Set-up ☐ Temperature/Cure ☐ Weld ☐ Wrong Stock Pulled ☐ Other
--	--	---	--

Picklist Print

February-23-15 10:15:53 AM

Page 3

Work Order ID: 129682

129682

Parent Item: D350-607-511

D350-607-511

Parent Item Name: Quick Release Basket Mounting Spacepod™ & Squirrel Cheek Fits LH or RH

Start Date: 2/13/15

Required Date: 2/23/15

Start Qty: 1.00

Required Qty: 1.00

D4775-041

Manufactured No

140

Each

9.0000

D4775-041

Strut Assembly

DAS
66
9-89

Location

Loc Qty

Loc Code

ST514

9

127655

8

127656

1

**

3130019.

DAS
46

9-89

DAS
26
9-89

D4776-3

Manufactured No

140

Each

27.0000

D4776-3

Skidtube Clevis

DAS
66
9-89

Location

Loc Qty

Loc Code

ST129A

27

127146

7

128437

20

**

2

DAS
46

9-89

DAS
26
9-89

AN4-14A

Purchased No

140

Each

197.0000

AN4-14A

Bolt

DAS
66
9-89

Location

Loc Qty

Loc Code

FG

5

122141

5

ST325A

177

M131153

177

ST344

15

M130716

15

**

20

MAR 24 2015

DAS
46
9-89

DAS
26
9-89

DQA: _____ Date: _____



WORK ORDER NON-CONFORMANCE / UPDATE

QA Closed: _____ Date: _____

Work Order update only ☐

Work Order: _____ Part No. _____ NCR No. _____	DISPOSITION Rework ☐ Scrap ☐ Use-as-is ☐ Suspected Unapproved ☐	AGAINST DEPARTMENT/PROCESS <table style="width: 100%;"> <tr> <td>Skid-tube ☐</td> <td>Crosstube ☐</td> <td>Water Jet ☐</td> <td>Engineering ☐</td> </tr> <tr> <td>Machining ☐</td> <td>Small Fab ☐</td> <td>Prod. Eng. Coord. ☐</td> <td>Quality ☐</td> </tr> <tr> <td>Thermoforming ☐</td> <td>Finishing ☐</td> <td>Rec/Store/Packaging ☐</td> <td>Other ☐</td> </tr> <tr> <td>Large Fab ☐</td> <td>Composite ☐</td> <td>Supplier ☐</td> <td></td> </tr> </table>	Skid-tube ☐	Crosstube ☐	Water Jet ☐	Engineering ☐	Machining ☐	Small Fab ☐	Prod. Eng. Coord. ☐	Quality ☐	Thermoforming ☐	Finishing ☐	Rec/Store/Packaging ☐	Other ☐	Large Fab ☐	Composite ☐	Supplier ☐	
Skid-tube ☐	Crosstube ☐	Water Jet ☐	Engineering ☐															
Machining ☐	Small Fab ☐	Prod. Eng. Coord. ☐	Quality ☐															
Thermoforming ☐	Finishing ☐	Rec/Store/Packaging ☐	Other ☐															
Large Fab ☐	Composite ☐	Supplier ☐																

Root Cause	Date	Step	Qty	Description of work order update or non-conformance	Initial Chief Eng	Action Description	Sign & Date	Verification	QC Inspector
Design									
Doc/Data									
Equip/Tooling									
Handling/Pre									
Material									
Operator									
Offset/Setup									
Process									
Supplier									
Training									
Transport									
Unapproved									

FAULT CATEGORY

Landing Gear ☐ Bending ☐ Centre Not Concentric ☐ Cracks ☐ Crimp/Kink/Ripple/Wave ☐ Cuffs ☐ Crushing ☐ Heat Treat ☐ Inspection Strip in Tube ☐ Marks/Chatter ☐ Turning Sequence ☐ Wave/Twist in Tube	General ☐ Bend ☐ BOM/Route ☐ Broken/Damage/Defect ☐ Burrs ☐ Contamination ☐ Countersink ☐ Cut Too Short ☐ Drawing ☐ Drill Holes ☐ Finish ☐ Fit/Function	☐ Folio/Program ☐ Grain ☐ Hardware ☐ Inspection Incomplete/Unqualified ☐ Instructions Incomplete/Unclear ☐ Misaligned/off center ☐ Mislabeled ☐ Misread ☐ Off-set ☐ Out of Calibration ☐ Out of Sequence	☐ Outside Dimensions ☐ Over/Under tolerance ☐ Part Incorrect ☐ Part Lost/Missing ☐ Part Moved ☐ Positioned Wrong ☐ Power Loss/Surge ☐ Pressure/Forced ☐ Set-up ☐ Temperature/Cure ☐ Weld ☐ Wrong Stock Pulled ☐ Other
--	--	---	--

Picklist Print

February-23-15 10:15:53 AM

Page 4

Work Order ID: 129682

129682

Parent Item: D350-607-511

D350-607-511

Parent Item Name: Quick Release Basket Mounting Spacepod™ & Squirrel Cheek Fits LH or RH

Start Date: 2/13/15

Required Date: 2/23/15

Start Qty: 1.00

Required Qty: 1.00

AN4-42A

Purchased

No

140

Each

92.0000

4

④

m131328

DAS
26
9-89

AN4-42A

Bolt

**

Location

Loc Qty

Loc Code

ST312A

80

M131320

80

ST341

12

M130726

12

DAS

46

9-89

UX

DAS
26
9-89

AN6-13A

Purchased

No

140

Each

54.0000

2

2

AN6-13A

BOLT

**

DAS

46

9-89

DAS
26
9-89

DAS
26
9-89

Location

Loc Qty

Loc Code

ST334

54

m130716

4

m131305

50

140

Each

3,991.000

24

24

MS21042L4

Purchased

No

MS21042L4

Locknut

**

MAR 24 2015

DAS

46

9-89

DAS
26
9-89

DAS
26
9-89

Location

Loc Qty

Loc Code

FP001

42

m124231

42

GA

704

m127813

704

ST260a

1146

m130799

62

m131340

1084

ST305

2099

426

426

m128300

8

m128798

8

m130922

101

m131618

1556

UX

February-23-15 10:15:53 AM

Shop Packet Print

Page 4

DQA: _____ Date: _____



WORK ORDER NON-CONFORMANCE / UPDATE

QA Closed: _____ Date: _____

Work Order update only ☐

Work Order: _____ Part No. _____ NCR No. _____	DISPOSITION Rework ☐ Scrap ☐ Use-as-is ☐ Suspected Unapproved ☐	AGAINST DEPARTMENT/PROCESS <table style="width: 100%;"> <tr> <td>Skid-tube ☐</td> <td>Crosstube ☐</td> <td>Water Jet ☐</td> <td>Engineering ☐</td> </tr> <tr> <td>Machining ☐</td> <td>Small Fab ☐</td> <td>Prod. Eng. Coord. ☐</td> <td>Quality ☐</td> </tr> <tr> <td>Thermoforming ☐</td> <td>Finishing ☐</td> <td>Rec/Store/Packaging ☐</td> <td>Other ☐</td> </tr> <tr> <td>Large Fab ☐</td> <td>Composite ☐</td> <td>Supplier ☐</td> <td></td> </tr> </table>	Skid-tube ☐	Crosstube ☐	Water Jet ☐	Engineering ☐	Machining ☐	Small Fab ☐	Prod. Eng. Coord. ☐	Quality ☐	Thermoforming ☐	Finishing ☐	Rec/Store/Packaging ☐	Other ☐	Large Fab ☐	Composite ☐	Supplier ☐	
Skid-tube ☐	Crosstube ☐	Water Jet ☐	Engineering ☐															
Machining ☐	Small Fab ☐	Prod. Eng. Coord. ☐	Quality ☐															
Thermoforming ☐	Finishing ☐	Rec/Store/Packaging ☐	Other ☐															
Large Fab ☐	Composite ☐	Supplier ☐																

Root Cause	Date	Step	Qty	Description of work order update or non-conformance	Initial Chief Eng	Action Description	Sign & Date	Verification	QC Inspector
Design									
Doc/Data									
Equip/Tooling									
Handling/Pre									
Material									
Operator									
Offset/Setup									
Process									
Supplier									
Training									
Transport									
Unapproved									

FAULT CATEGORY

Landing Gear ☐ Bending ☐ Centre Not Concentric ☐ Cracks ☐ Crimp/Kink/Ripple/Wave ☐ Cuffs ☐ Crushing ☐ Heat Treat ☐ Inspection Strip in Tube ☐ Marks/Chatter ☐ Turning Sequence ☐ Wave/Twist in Tube	General ☐ Bend ☐ BOM/Route ☐ Broken/Damage/Defect ☐ Burrs ☐ Contamination ☐ Countersink ☐ Cut Too Short ☐ Drawing ☐ Drill Holes ☐ Finish ☐ Fit/Function	☐ Folio/Program ☐ Grain ☐ Hardware ☐ Inspection Incomplete/Unqualified ☐ Instructions Incomplete/Unclear ☐ Misaligned/off center ☐ Mislabeled ☐ Misread ☐ Off-set ☐ Out of Calibration ☐ Out of Sequence	☐ Outside Dimensions ☐ Over/Under tolerance ☐ Part Incorrect ☐ Part Lost/Missing ☐ Part Moved ☐ Positioned Wrong ☐ Power Loss/Surge ☐ Pressure/Forced ☐ Set-up ☐ Temperature/Cure ☐ Weld ☐ Wrong Stock Pulled ☐ Other
--	--	---	--

Picklist Print

February-23-15 10:15:53 AM

Page 5

Work Order ID: 129682

129682

Parent Item: D350-607-511

D350-607-511

Parent Item Name: Quick Release Basket Mounting Spacepod™ & Squirrel Cheek Fits LH or RH

Start Date: 2/13/15

Required Date: 2/23/15

Start Qty: 1.00

Required Qty: 1.00

MS21042L6

Purchased

No

140

Each

516.0000

2

2

MS21042L6

Nut

**

M B 6799

DAS
26
9-89

DAS
66
9-89

Location

Loc Qty

Loc Code

DAS
46
9-89

ST273A

200

m131624

200

ST304

212

m129499

12

m131317

200

ST305

104

m129909

8

m130799

96

NAS1149F0432P

Purchased

No

140

Each

776.0000

40

40

NAS1149F0432P

WASHER

**

DAS
46
9-89

DAS
26
9-89

DAS
66
9-89

Location

Loc Qty

Loc Code

st268

776

M128995

63

M131340

713

NAS1149F0663P

Purchased

No

140

Each

184.0000

4

4

NAS1149F0663P

WASHER

**

DAS
46
9-89

DAS
26
9-89

DAS
66
9-89

Location

Loc Qty

Loc Code

st268

184

M128591

9

M131317

175

MAR 24 2015

DQA: _____ Date: _____



WORK ORDER NON-CONFORMANCE / UPDATE

QA Closed: _____ Date: _____

Work Order update only ☐

Work Order: _____ Part No. _____ NCR No. _____	DISPOSITION Rework ☐ Scrap ☐ Use-as-is ☐ Suspected Unapproved ☐	AGAINST DEPARTMENT/PROCESS <table style="width: 100%;"> <tr> <td>Skid-tube ☐</td> <td>Crosstube ☐</td> <td>Water Jet ☐</td> <td>Engineering ☐</td> </tr> <tr> <td>Machining ☐</td> <td>Small Fab ☐</td> <td>Prod. Eng. Coord. ☐</td> <td>Quality ☐</td> </tr> <tr> <td>Thermoforming ☐</td> <td>Finishing ☐</td> <td>Rec/Store/Packaging ☐</td> <td>Other ☐</td> </tr> <tr> <td>Large Fab ☐</td> <td>Composite ☐</td> <td>Supplier ☐</td> <td></td> </tr> </table>	Skid-tube ☐	Crosstube ☐	Water Jet ☐	Engineering ☐	Machining ☐	Small Fab ☐	Prod. Eng. Coord. ☐	Quality ☐	Thermoforming ☐	Finishing ☐	Rec/Store/Packaging ☐	Other ☐	Large Fab ☐	Composite ☐	Supplier ☐	
Skid-tube ☐	Crosstube ☐	Water Jet ☐	Engineering ☐															
Machining ☐	Small Fab ☐	Prod. Eng. Coord. ☐	Quality ☐															
Thermoforming ☐	Finishing ☐	Rec/Store/Packaging ☐	Other ☐															
Large Fab ☐	Composite ☐	Supplier ☐																

Root Cause	Date	Step	Qty	Description of work order update or non-conformance	Initial Chief Eng	Action Description	Sign & Date	Verification	QC Inspector
Design ☐									
Doc/Data ☐									
Equip/Tooling ☐									
Handling/Pre ☐									
Material ☐									
Operator ☐									
Offset/Setup ☐									
Process ☐									
Supplier ☐									
Training ☐									
Transport ☐									
Unapproved ☐									

FAULT CATEGORY

Landing Gear ☐ Bending ☐ Centre Not Concentric ☐ Cracks ☐ Crimp/Kink/Ripple/Wave ☐ Cuffs ☐ Crushing ☐ Heat Treat ☐ Inspection Strip in Tube ☐ Marks/Chatter ☐ Turning Sequence ☐ Wave/Twist in Tube	General ☐ Bend ☐ BOM/Route ☐ Broken/Damage/Defect ☐ Burrs ☐ Contamination ☐ Countersink ☐ Cut Too Short ☐ Drawing ☐ Drill Holes ☐ Finish ☐ Fit/Function	☐ Folio/Program ☐ Grain ☐ Hardware ☐ Inspection Incomplete/Unqualified ☐ Instructions Incomplete/Unclear ☐ Misaligned/off center ☐ Mislabeled ☐ Misread ☐ Off-set ☐ Out of Calibration ☐ Out of Sequence
		☐ Outside Dimensions ☐ Over/Under tolerance ☐ Part Incorrect ☐ Part Lost/Missing ☐ Part Moved ☐ Positioned Wrong ☐ Power Loss/Surge
		☐ Pressure/Forced ☐ Set-up ☐ Temperature/Cure ☐ Weld ☐ Wrong Stock Pulled ☐ Other

DART SERVICE INSTRUCTION

TO AMEND INSTALLATION INSTRUCTIONS D350-607-3 Rev.D,
INSTALLATION INSTRUCTIONS D350-607-4 Rev. C AND
INSTRUCTIONS FOR CONTINUED AIRWORTHINESS ICA-D350-607 REV. 6
REF TCCA STC: SH94-14
REF FAA STC: SR00213NY
REF EASA STC: EASA.10016996
REF BRAZILIAN STC: 2007S03-03/-04/-05/-06

1291682-MCS
1502-15
RE-2021
REPLACEMENT
(COPY)

1.0 PURPOSE

This service instruction provides parts and instructions to facilitate installation of forward Basket Strut for customers that have purchased: D350-607-501 Conversion Kit @ CHG 004, D350-607-511 Quick Release Basket Mounting Kit @ CHG 004, D350-607-541 @ CHG 006, D350-607-543 @ CHG 007, D350-607-545 @ CHG 006, D350-607-547 @ CHG 007 Heli-Utility-Baskets as well as the D350-607-431 Strut Retrofit Kit and the D350-607-641 Long Cargo Tube @ CHG 001.

2.0 PARTS LIST:

Modify the quantities for D3910-5 and add D3910-7 as follows:

QTY -541	QTY -543	QTY -545	QTY -547	QTY -511	QTY -501	PART NUMBER	DESCRIPTION
X						D350-607-541	HELI-UTILITY-BASKET @ CHG 007 OR LATER
	X					D350-607-543	HELI-UTILITY-BASKET @ CHG 008 OR LATER
		X				D350-607-545	HELI-UTILITY-BASKET @ CHG 007 OR LATER
			X			D350-607-547	HELI-UTILITY-BASKET @ CHG 005 OR LATER
1	1	1	1	X		D350-607-511	QUICK RELEASE BASKET MOUNTING KIT @ CHG 005 OR LATER
					X	D350-607-501	CONVERSION KIT @ CHG 005 OR LATER
				1	1	D3910-5	X-TUBE LUG
				1	1	D3910-7	X-TUBE LUG

(ADD)

QTY -413	QTY -415	QTY -417	QTY -419	QTY -431	PART NUMBER	DESCRIPTION
X					D350-607-413	HEAVY DUTY LID KIT (LONG)
	X				D350-607-415	HEAVY DUTY LID KIT (SHORT)
		X			D350-607-417	LIGHTWEIGHT LID KIT (LONG)
			X		D350-607-419	LIGHTWEIGHT LID KIT (SHORT)
				X	D350-607-431	STRUT RETROFIT KIT @ CHG 005 OR LATER
				1	D3910-5	X-TUBE LUG
				1	D3910-7	X-TUBE LUG

(ADD)

QTY -641	QTY -611	QTY -511	QTY -431	PART NUMBER	DESCRIPTION
X				D350-607-641	QUICK RELEASE LONG CARGO TUBE
1	X			D350-607-611	LONG CARGO TUBE
1		X		D350-607-511	QUICK RELEASE BASKET MOUNTING KIT @ CHG 005 OR LATER
			X	D350-607-431	STRUT RETROFIT KIT @ CHG 005 OR LATER
		1	1	D3910-5	X-TUBE LUG
		1	1	D3910-7	X-TUBE LUG

(ADD)

CANADA
DEPARTMENT OF TRANSPORT
AIRCRAFT CERTIFICATION
BRANCH
DAO # 01-O-01

APPROVED

BY: 
D. SHEPHERD (DE # 02)

DATE: 14.05.16
CERT. NO.: SH94-14
ISSUE NO.: 6

A	NEW ISSUE	AJS	14.05.16
REV.	DESCRIPTION	BY	DATE
DESIGN	AJS	DART AEROSPACE LTD HAWKESBURY, ONTARIO, CANADA	
DRAWN	AJS		
CHECKED		DRAWING NO.	REV. A
MFG. APPR.	N/A	DSI 9699	SHEET 1 OF 2
APPROVED		TITLE	SCALE
DE APPR.		LUG REPLACEMENT	NTS
DATE	14.05.16	COPYRIGHT © 2014 BY DART AEROSPACE LTD THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.	

3.0 PROCEDURE:

Install the D350-607-501 Conversion Kit, D350-607-511 Quick Release Mounting Kit or D350-607-431 Strut retrofit kit per Installation Instructions D350-607-3 Rev. D or D350-607-4 Rev. C. While installing the Forward Strut perform the following:

- 3.1 Substitute the Forward Lower D3910-5 X-Tube Lug with the D3910-7 X-Tube Lug as shown in Figure 1.
- 3.2 Install the forward D4775-041 Strut Assembly. Transfer mark from the upper hole on the clevis of the D4775-041 Strut Assembly to the D3910-7 X-tube Lug and drill thru the lug $\varnothing 0.257$ - $\varnothing 0.261$ as shown in Figure 1. Touch up chemical conversion coating per MIL-DTL-5541. Check the witness holes located at the bottom end of the D4775-041 Strut Assemblies to ensure that the thread from the rod end extends past the witness hole.
Torque MS21042L4/-4 nuts to 50-70 in-lbs (5.7-7.9 N-m). Torque MS21042L6/-6 nuts to 160-190 in-lbs (18.1-21.5 N-m).
- 3.3 Complete the installation in accordance with Installation Instructions D350-607-3 Rev. D or D350-607-4 Rev. C.

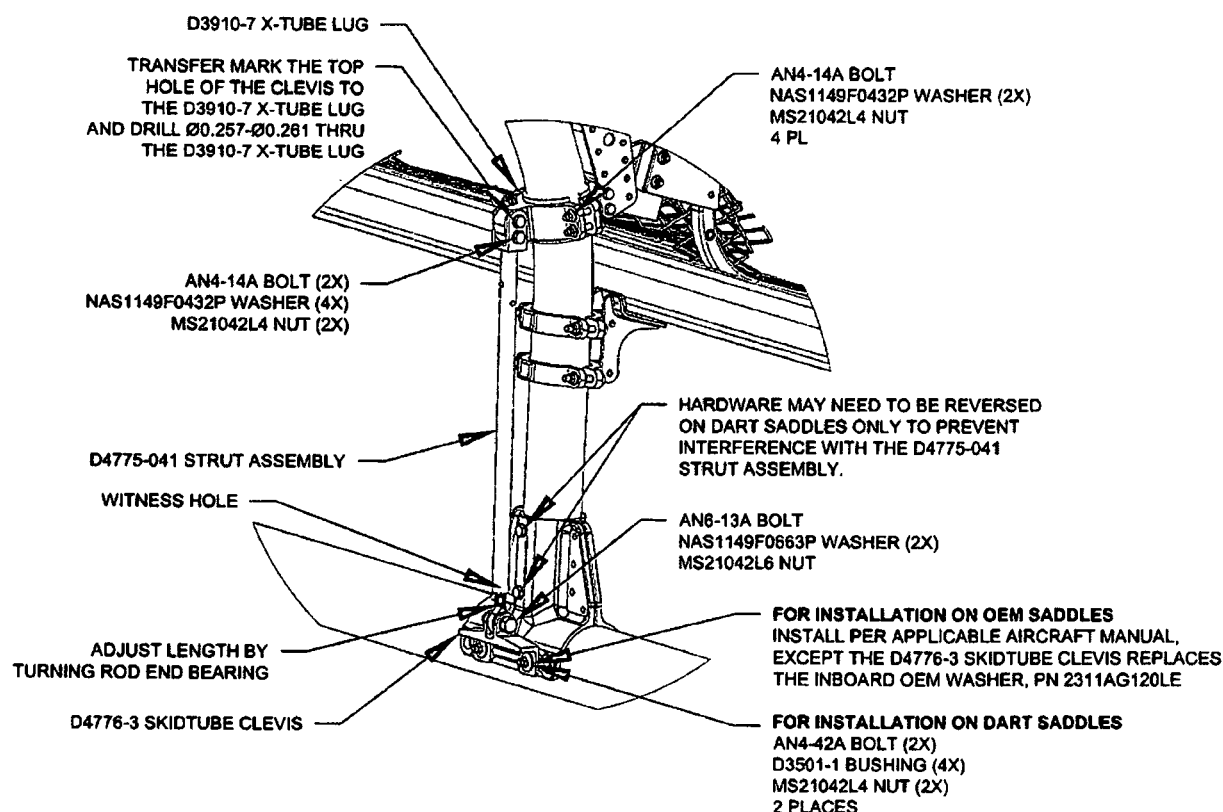


FIGURE 1: INSTALLATION OF D4775-041 FWD STRUT

4.0 WEIGHT AND BALANCE:

There is no weight and balance change associated with this update.

CANADA
DEPARTMENT OF TRANSPORT
AIRCRAFT CERTIFICATION
BRANCH
DAO # 01-O-01

APPROVED

BY: *[Signature]*
D. SHEPHERD (DE # 02)

DATE: 14.05.16
CERT. NO.: SH94-14
ISSUE NO.: 6

DESIGN	AJS	DART AEROSPACE LTD HAWKESBURY, ONTARIO, CANADA	
DRAWN	AJS		
CHECKED	<i>[Signature]</i>	DRAWING NO.	REV. A
MFG. APPR.	N/A	DSI 9699	SHEET 2 OF 2
APPROVED	<i>[Signature]</i>	TITLE	SCALE
DE APPR.	<i>[Signature]</i>	LUG REPLACEMENT	NTS
DATE	14.05.16	COPYRIGHT © 2014 BY DART AEROSPACE LTD THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.	

DART AEROSPACE LTD.

REFERENCE C...

DAS
C6
9-89

D350-607-4

Page 18 of 18

5.0 PARTS LIST

QTY -641	QTY -611	QTY -511	QTY -431	PART NUMBER	DESCRIPTION
X				D350-607-641	QUICK RELEASE LONG CARGO TUBE
1	X			D350-607-611	LONG CARGO TUBE
1		X		D350-607-511	QUICK RELEASE BASKET MOUNTING KIT
			X	D350-607-431	STRUT RETROFIT KIT
		8	8	D350-1	BUSHING
		2		D3910-3	X-TUBE LUG
		2	2	D3910-5	X-TUBE LUG
1				D3912-041	EYEBOLT RECEIVER ASSY
4				D3917-3	WASHER
		8	4	D3984-030	RUBBER EXTRUSION, X-TUBE
		1		D4148-041	FWD X-TUBE LUG ASSY
		1		D4149-041	AFT X-TUBE LUG ASSY
1				D4151-043	BASKET FWD HARDPOINT ASSY (UPPER)
		2	2	D4775-041	STRUT ASSEMBLY
		2	2	D4776-3	SKIDTUBE CLEVIS
1				D4874-041	CARGO TUBE ASSEMBLY
1				D4875-043	CARGO TUBE AFT STRUT
1				D4875-045	FWD ATTACHMENT CLEVIS
			1	D4917-300	PLACARD MAX LOAD
			1	D4917-310	PLACARD MAX LOAD
			1	D4917-315	PLACARD, MAX LOAD
			1	D4917-320	PLACARD, MAX LOAD
			1	D4917-332	PLACARD, MAX LOAD
1				D5028-041	PLUG ASSEMBLY
1				D5031-041	LOCK PIN ASSY
2				AN310-4	CASTLE NUT
2				AN4-11	BOLT
4				AN4-13A	BOLT
		20	12	AN4-14A	BOLT
		4	4	AN4-42A	BOLT
		2	2	AN6-13A	BOLT
4		24	16	MS21042L4	NUT
		2	2	MS21042L6	NUT
2				MS24665-151	COTTER PIN
20		40	24	NAS1149F0432P	WASHER
		4	4	NAS1149F0663P	WASHER

• COPYRIGHT © 2013 BY DART AEROSPACE LTD. •
THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.

Revision: C
Date: 14.01.02

DART SERVICE INSTRUCTION

TO AMEND INSTALLATION INSTRUCTIONS D350-607-3 Rev.D,
INSTALLATION INSTRUCTIONS D350-607-4 Rev. C AND
INSTRUCTIONS FOR CONTINUED AIRWORTHINESS ICA-D350-607 REV. 6
REF TCCA STC: SH94-14
REF FAA STC: SR00213NY
REF EASA STC: EASA.10016996
REF BRAZILIAN STC: 2007S03-03/-04/-05/-06

1.0 PURPOSE

This service instruction provides parts and instructions to facilitate installation of forward Basket Strut for customers that have purchased: D350-607-501 Conversion Kit @ CHG 004, D350-607-511 Quick Release Basket Mounting Kit @ CHG 004, D350-607-541 @ CHG 006, D350-607-543 @ CHG 007, D350-607-545 @ CHG 006, D350-607-547 @ CHG 007 Heli-Utility-Baskets as well as the D350-607-431 Strut Retrofit Kit and the D350-607-641 Long Cargo Tube @ CHG 001.

2.0 PARTS LIST:

Modify the quantities for D3910-5 and add D3910-7 as follows:

QTY -541	QTY -543	QTY -545	QTY -547	QTY -511	QTY -501	PART NUMBER	DESCRIPTION
X						D350-607-541	HELI-UTILITY-BASKET @ CHG 007 OR LATER
	X					D350-607-543	HELI-UTILITY-BASKET @ CHG 008 OR LATER
		X				D350-607-545	HELI-UTILITY-BASKET @ CHG 007 OR LATER
			X			D350-607-547	HELI-UTILITY-BASKET @ CHG 005 OR LATER
1	1	1	1	X		D350-607-511	QUICK RELEASE BASKET MOUNTING KIT @ CHG 005 OR LATER
					X	D350-607-501	CONVERSION KIT @ CHG 005 OR LATER
					1	D3910-5	X-TUBE LUG
					1	D3910-7	X-TUBE LUG

(ADD)

QTY -413	QTY -415	QTY -417	QTY -419	QTY -431	PART NUMBER	DESCRIPTION
X					D350-607-413	HEAVY DUTY LID KIT (LONG)
	X				D350-607-415	HEAVY DUTY LID KIT (SHORT)
		X			D350-607-417	LIGHTWEIGHT LID KIT (LONG)
			X		D350-607-419	LIGHTWEIGHT LID KIT (SHORT)
				X	D350-607-431	STRUT RETROFIT KIT @ CHG 005 OR LATER
				1	D3910-5	X-TUBE LUG
				1	D3910-7	X-TUBE LUG

(ADD)

QTY -641	QTY -611	QTY -511	QTY -431	PART NUMBER	DESCRIPTION
X				D350-607-641	QUICK RELEASE LONG CARGO TUBE
1	X			D350-607-611	LONG CARGO TUBE
1		X		D350-607-511	QUICK RELEASE BASKET MOUNTING KIT @ CHG 005 OR LATER
			X	D350-607-431	STRUT RETROFIT KIT @ CHG 005 OR LATER
		1	1	D3910-5	X-TUBE LUG
		1	1	D3910-7	X-TUBE LUG

(ADD)

CANADA
DEPARTMENT OF TRANSPORT
AIRCRAFT CERTIFICATION
BRANCH
DAO # 01-O-01

APPROVED
BY: 
D. SHEPHERD (DE # 02)

DATE: 14.05.16
CERT. NO.: SH94-14
ISSUE NO.: 6

A	NEW ISSUE	AJS	14.05.16
REV.	DESCRIPTION	BY	DATE
DESIGN	AJS	DART AEROSPACE LTD	
DRAWN	AJS	HAWKESBURY, ONTARIO, CANADA	
CHECKED		DRAWING NO.	REV. A
MFG. APPR.	N/A	DSI 9699	SHEET 1 OF 2
APPROVED		TITLE	SCALE
DE APPR.		LUG REPLACEMENT	NTS
DATE	14.05.16	COPYRIGHT © 2014 BY DART AEROSPACE LTD THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.	

Work Order ID 129682

February-23-15 10:15:54 AM

129682

Page 1

Item ID: D350-607-511 Accept ***N900040100*** Setup Start ***NS1***
 Revision ID: Stop ***NS2***
 Item Name: Quick Release Basket Mounting Spacepod™ & Squirrel Cheek Fits LH or RH
 Start Date: 2/13/15 Start Qty: 1.00 ***1*** Cust Item ID:
 Required Date: 2/23/15 Req'd Qty: 1.00 ***1*** Customer:
 Reference:

Approvals: Process Plan: ML5 Date: 1502-24 Tooling: _____ Date: _____
 QC: _____ Date: _____ SPC (Y/N): _____ Date: _____
 Run Start ***NR1***
 Stop ***NR2***

Sequence ID/ Work Center ID	Operation Description	Set Up/ Run Hours	Tool ID	Tool #	Plan Code	Accept Qty	Reject Qty	Reject Number	Insp. Stamp
Draw Nbr	Revision Nbr								
D350-607-4	C								
DSI9699	A								
100	Document Control	0.00							
100	DOCUMENT CONTROL								
DC	Memo	0.00							
Doc.Control -USB or Paperwork	Photocopy bluefile & type labels per PPP D350-607-511 CHG006								
140	Pick Kit	0.00							
140									
Packaging	Memo	0.00							
Packaging									

ML5 1503-24